
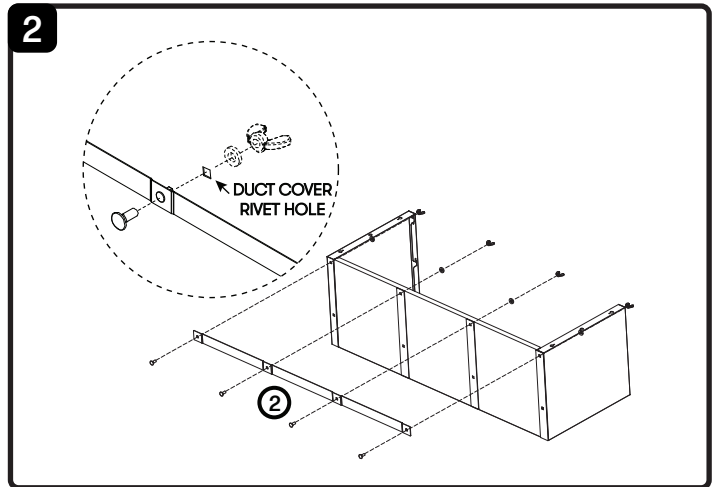
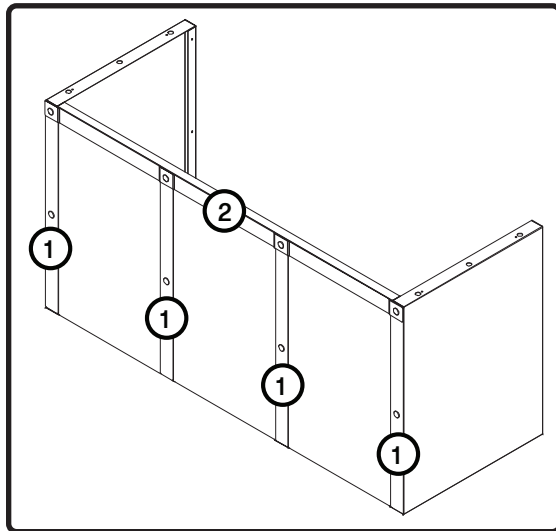
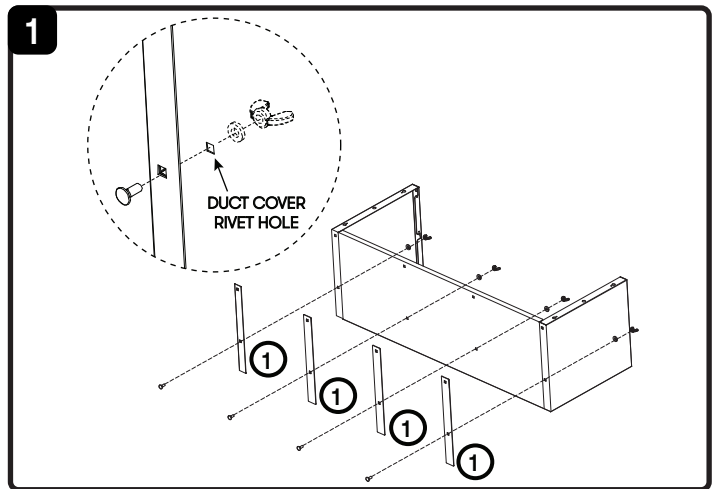
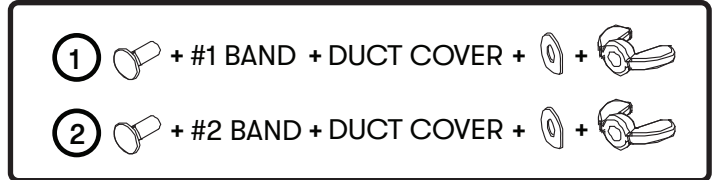


Forte Duct Cover Banding Kit Installation Instructions

BKDC13612AMB
BKDC13612ASG
BKDC13618AMB
BKDC13618ASG

BKDC14812AMB
BKDC14812ASG
BKDC14818AMB
BKDC14818ASG

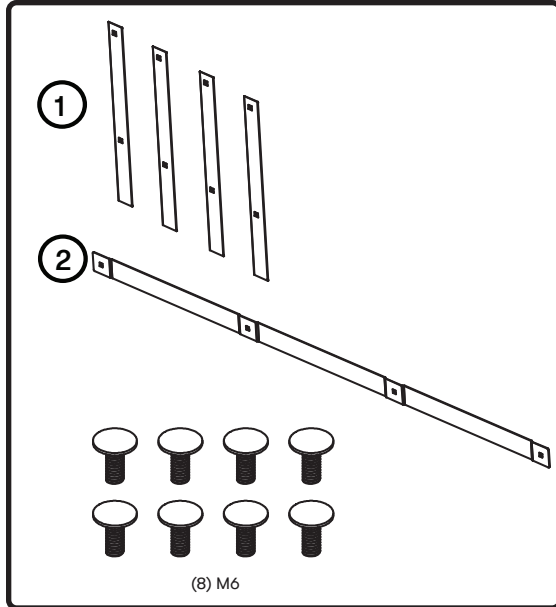

See Forte hood installation instructions for more installation details. Use the washers and wingnuts inside the Duct Cover Hardware packet, included with the duct cover, to complete assembly.