



Alto Hood Banding Kit Installation Instructions

BKAL36APG BKAL48APG
BKAL36APC BKAL48APC

LIST OF MATERIALS

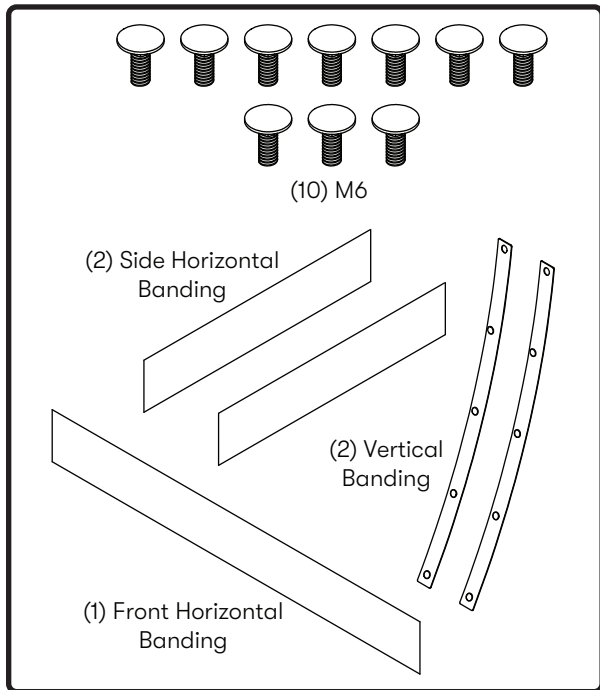

+ VERTICAL BANDING + +

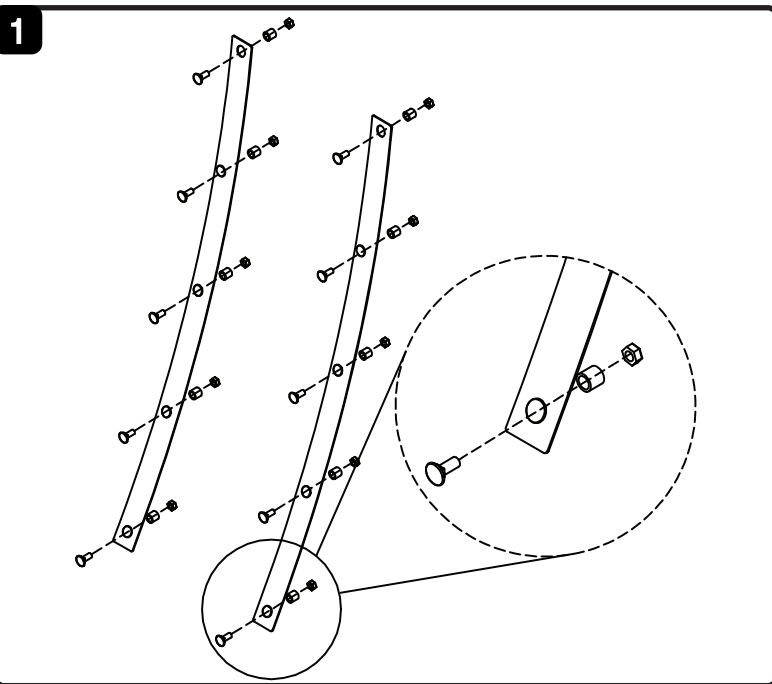


2

NOTE:

If the rivets are not lining up with the holes on the Alto body while installing the vertical banding, flip the vertical banding around and retry.

The front and side horizontal banding have a polished and brushed side. Adhere the brushed side against the magnets.

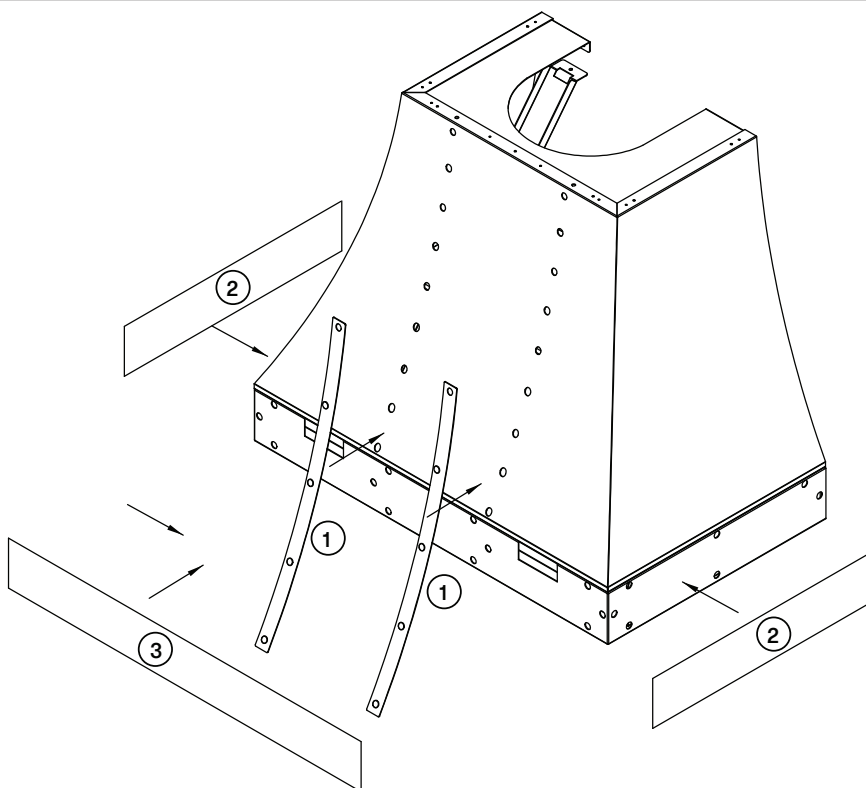

See Alto hood installation instructions for more installation details. Use the bushings and nuts inside the Hood Banding Hardware packet, included with the hood, to complete assembly.