



Alto Duct Cover Accessory Installation Instructions

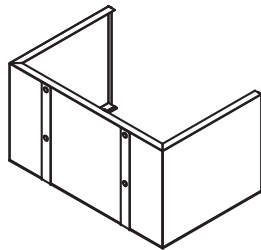



DC23612AS
(36"W x 12"H)

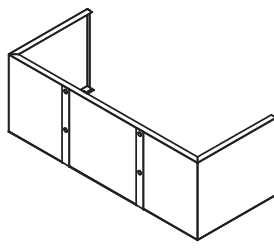


DC24812AS
(48"W x 12"H)




LIST OF MATERIALS

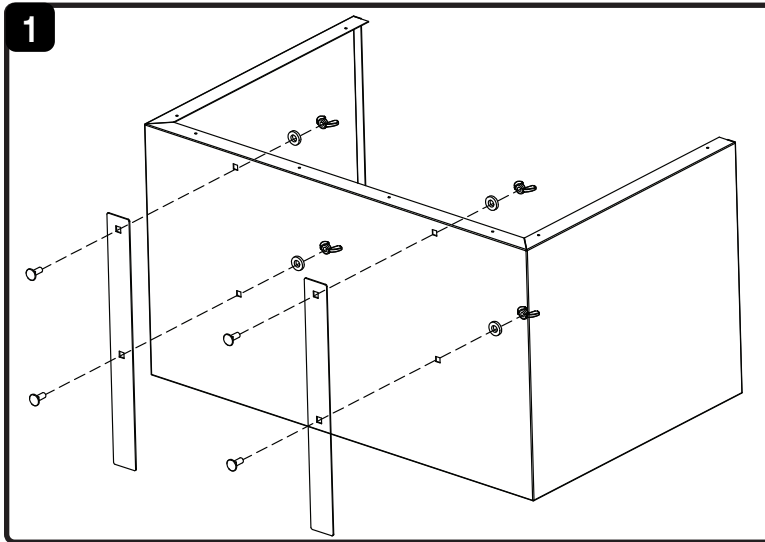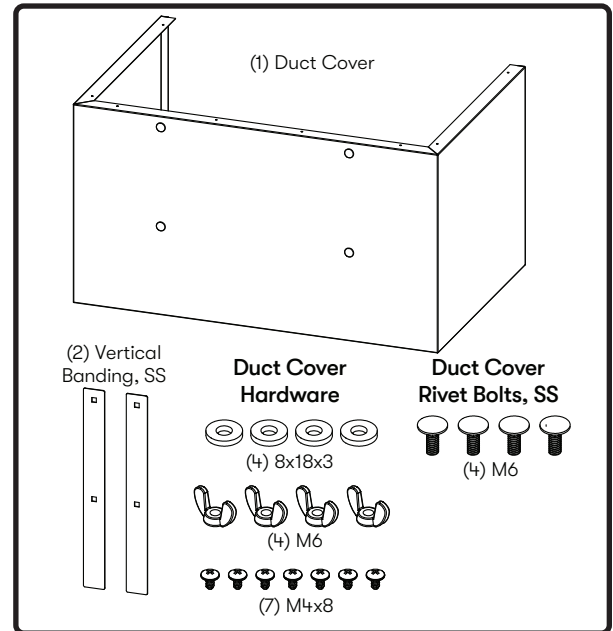

1. Secure the (2) vertical banding onto the duct cover by (1) rivet bolt, washer, and wingnut per banding.

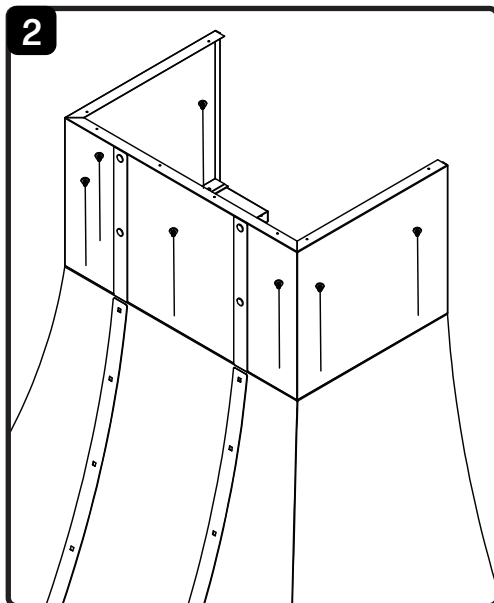

2. Install the duct cover onto the Alto custom hood by using the included (7) M4 x 8 screws. (3) screws at the front, (2) screws per side.

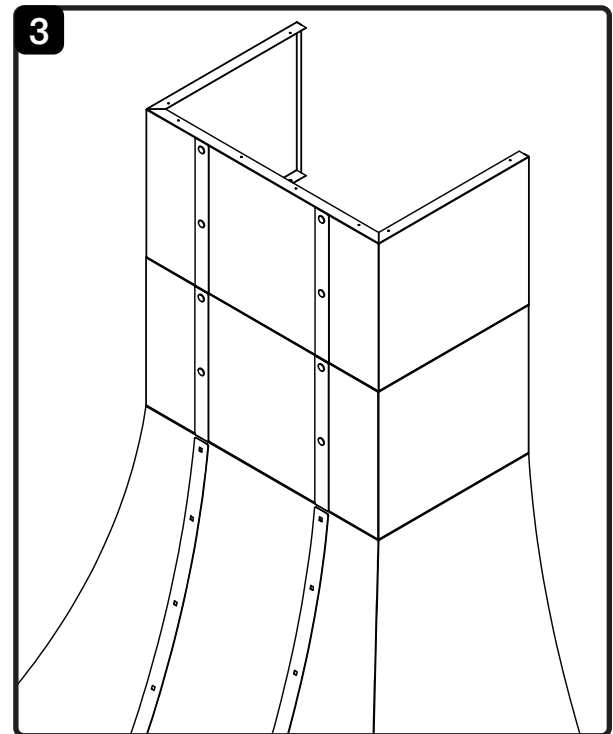

3. **OPTIONAL:** The Alto duct cover accessory can be stacked to accommodate taller ceiling heights. Stack the duct covers together by installing the included (7) M4 x 8 screws.