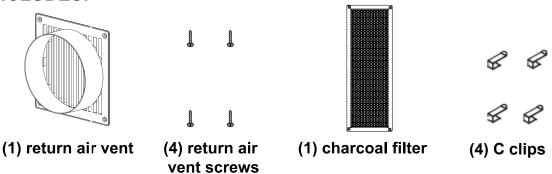


ZRC-8400 / ZRC-00PI Recirculating Kit Instructions

THIS KIT INCLUDES:



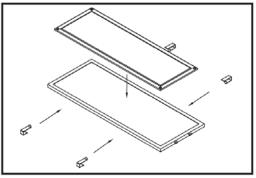



FIG .1

- Remove mesh filter from hood and place charcoal on the top of mesh filter. Secure charcoal filter by 4 C clips from recirculation kit, 2 C clips for each enlongated side of charcoal filter, FIG. 1.
- 2. Reinstall mesh filter.
- 3. Charcoal filter must be replaced after every 120 hours of use or approximately every 3 to 4 months based on an average daily use of 1 hour of cooking time.

To install the return air vent to top of the cabinet:

(for installations where cabinet does not extend to the ceiling)


- Cut a 6-1/2" round opening in top of the cabinet where the ducting will connect to the return air vent. FIG. 2
- 2. Connect 6" round ducting from blower collar to return air vent collar. Return air vent collar will go around the ducing. Secure with duct tape.
- Secure return air vent to top of cabinet with (4) screws.

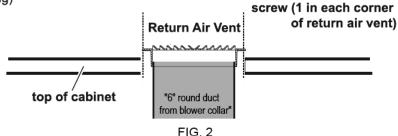

To install the return air vent to a soffit or ceiling:

(for installations where top of cabinet is flush with the ceiling)

- Cut a 6-1/2" round opening in soffit or ceiling where the ducting will connect to the return air vent. FIG. 3
- 2. Connect 6" round ducting from blower collar to return air vent collar. Return air vent collar will go around the ducing. Secure with duct tape.
- Secure return air vent to soffit or ceiling with (4) screws.

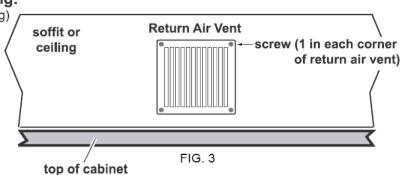

note: Return air vent deflectors should face the sides to properly vent the air. FIG. 4

